

## Konftel 300IP and TDC Scale

### What you need


- A TDC Scale account
- A Konftel 300IP (software version 2.0.5 or higher) with internet connection

### Installation

Login to your Konftel 300IP and enter the account settings that you have.

**Make sure that you enter the proxy settings as outbound proxy and that you end the address with ;  
lr;hide**

Eg. If you got a proxy address (from TDC Scale) that is proxy.a.b.net, enter this in the “**Outbound proxy**” as proxy.a.b.net;  
lr;hide

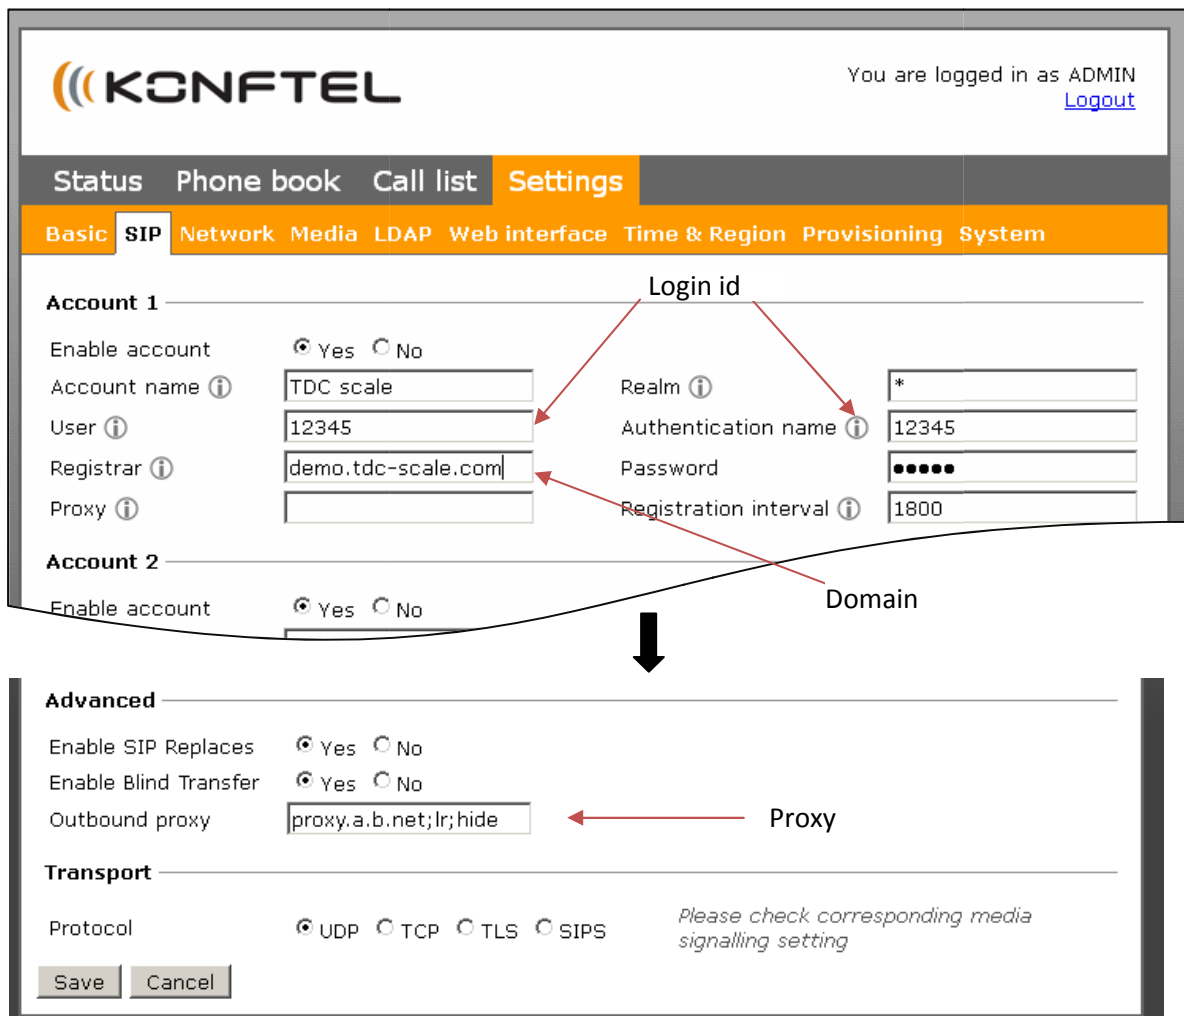

**KONFTEL** You are logged in as ADMIN [Logout](#)

Status Phone book Call list **Settings**

Basic **SIP** Network Media LDAP Web interface Time & Region Provisioning System

**Account 1**

Enable account  Yes  No

Account name ⓘ

User ⓘ

Registrar ⓘ

Proxy ⓘ

Login id

Realm ⓘ

Authentication name ⓘ

Password

Registration interval ⓘ

**Account 2**

Enable account  Yes  No

**Advanced**

Enable SIP Replaces  Yes  No

Enable Blind Transfer  Yes  No

Outbound proxy  Proxy

**Transport**

Protocol  UDP  TCP  TLS  SIPs *Please check corresponding media signalling setting*